

# Manual for Shadow SH Four Plus Preamplifier for Acoustic Instruments

SH Four Plus is a four band EQ with volume control. It has a phase invert switch to minimize the feedback. With EQ-Shape switch you can choose linear or "V" shaped frequency in the middle position of the tone controls. 9 V battery is under the preamp and is easy accessible by lifting the preamp out of the case.

## Features:

- EQ Shape,
- Phase Invert Switch,
- Volume Control,
- Treble, Mid, Bass and Brilliance Controls for Undersaddle Pickup
- Low Battery LED,

Push both buttons to the center of the preamp and lift the preamp upwards to change 9V battery. Note correct polarization.


Adjust the volume of the overall signal output.

Potentiometers to set up brilliance bass, mid and treble of the undersaddle pickup in the bridge. Middle position flat.

Phase switch inverts the signal and cancels the overall feedback.

Low Battery indicator will turn red when battery need to be exchanged.

If you have this switch in OFF position and your tone (EQ) controls are in middle position, the signal will have a flat frequency curve.

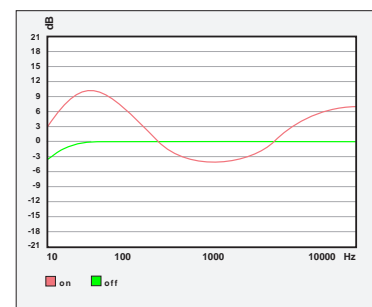

When you turn the EQ-Shape switch ON (push it down), it will boost the bass and treble and it will cut tone control pot positions. Now you can use your tone controls to trim sound as desired.

